The Atlantic

LampizatOr DAC – User Manual

August 2016 V 1.0



WARNING: as every DAC comes with a 7 days testing period (please to confirm it - ask your dealer first), during this time it is not allowed to open the DAC. The screws are protected with a seal. You have to decide, if you like the sound and you want to keep it. After the 7 days period expire – your DAC is a keeper, and you may open the hood. This does not invalidate the warranty, however – any modifications – no matter how small – invalidate the 5 years warranty. Changes, upgrades and mods must be pre-authorized in writing, even tube change. DACS returned during the test period with the seal broken will not be refunded and will be sent back.

THE SHORT MANUAL

- 1. Plug in
- 2. Enjoy

Contents:

The description of REMOTE CONTROL	1
The description of REMOTE CONTROL	5
A quick guide to a smooth start	6
Introduction	7
Data formats	7
Audio volume level	8
The heat issue	9
Optimal placement	9
Power on-off cycle	9
Cabling and cable handling10	D
Tube rolling and replacement1	1
Rectifier Rolling1	3
Aging problems14	4
Fuse Change14	4
Volume control VC031	5
PROGRAMMING THE MODULE1	5
DANZUP (recognized by the welcome line text LAMPIZATOR.EU) remote control17	7
COOPERATION WITH THE PREAMP	7
DIGITAL INPUTS18	3
The TOSLINK connection20	D
USB playback2 [.]	1
MAC OS operation of USB output:	2
LISTENING TO THE MUSIC	5
JRiver DSD setting screenshots	1
Block Diagrams	3
SOME Q & A	5
I PLUGGED EVERYTHING BUT I GET NO SOUND	6

The description of REMOTE CONTROL

functions for VC03 systems

(the one with display welcome note is VC03 or VC04)

ON powers up/down the whole DAC but the Remote Control processing circuit remains powered even after switch off. If you switch off by the rear power button - it also powers down the remote circuit therefore it will be impossible to switch the DAC on via remote.

Vol UP and Down - changes the volume from complete MUTE (-63 dB) to complete bypass - 0 dB

Channel Up/Down - changes the analog and digital inputs to the tube section. Usually 1 = DAC PCM/DSD, 2 = PREAMP Line Input 1, 3 and 4 are spare and unused. Also - use numeric buttons 1,2,3 and 4.

The function and input of each "channel" as well as the alpha text descriptors are freely programmable.

MUTE does just that - mute. After pressing again - the DAC will go back to the last volume used. Touching the Vol-Up and Vol Down functions will un-mute automatically.

Numeric buttons 1:9 and 0

The 1-4 buttons were described above and they choose analog "client" inputs of the tube section.

Button 5 is reserved.

Button 6 as well as 9 can be programmed as a switching relay and can perform any desired relay function. Usually it will be digital input selector like Toslink, AES/EBU or BNC.

Button 7 and 8 - this is a pair which switches the relay inside. It can be freely programmed as any function we can imagine by a relay. In 99% of our DACs this was used to switch between USB(PCM) input and SPDIF group of inputs. By group we mean all of the biphase inputs like SPDIF, Toslink, AESEBU, BNC, etc.

You will see on the display - an alphanumeric text describing the input - for example 7 = S/PDIF and 8 = USB. You can change the descriptors freely under the SERVICE MENU - the **Dig. Input Name** section.

		ON
Vol UP		Channel Up
Vol Down	\frown	Channel Down
	Mute	
	2	3
	5	6
7	8	9
	0	
Lam	piza	ltOr

The description of REMOTE CONTROL

functions for DANZUP systems

(the welcome note on the display comes with <u>LAMPIZATOR.EU</u> message)

ON powers up/down just the standby function (to power up/down the whole DAC use the rear power switch)

The DANZUP system is identical to TARAS system of volume from sound circuit point of view. The software functionlity is different.

Vol UP and Down - changes the volume from (-63 dB) (not complete MUTE however) to complete bypass - 0 dB

Channel Up/Down - changes the analog inputs to the tube section. Usually 1 = DAC PCM, 2 = Line Preamp input 1, 3 and 4 = Line Preamp inputs normally un used.

Also - use numeric buttons 1,2,3 and 4.

MUTE does just that - mute. After pressing again - the DAC will go back to the last volume used. Touching the Vol-Up and Vol Down functions will un-mute automatically.

Numeric buttons 1:9 and 0

The 1-4 buttons were described above and they choose analog "client" inputs of the tube section.

Buttons 5,6,7 and 8 are reserved.

Button 0 as well as 9 are fixed and programmed as a switching relay and can perform any desired relay function. Usually it will be digital input selector like USB, Toslink, AES/EBU or BNC. Note: These button functions - 0 and 9 - do HAVE an alphanumeric representation on the display. Pressing the same button again reverses the action.

Button 0 and 9 - in 99% of our DACs this was used to switch between USB (PCM) input and SPDIF group of inputs. By group we mean all of the bi-phase inputs like SPDIF, Toslink, AESEBU, BNC, etc. You will see on the display - an alphanumeric text describing the input - for example 0 = S/PDIF and again 0 = USB. When in S/Pdif the 9 toggles between two of them like Toslink and RCA SPDIF and is described o the screen as Si1 and Si2.

A quick guide to a smooth start

THE RING BUTTON

In all DACs up to serial #500 the ring button used to be just the mains power switch. Recently we started using the ring for other purposes, namely - for whatever we think will be most useful (in non-volume DACs).

If your DAC is a non-volume type (without display) the ring button can be:

- 1. Power button if there is no power toggle at the back right next to the IEC AC power inlet socket. This comes PER REQUEST ONLY as 99% of DACs the ring button does USB.
- 2. USB to NON-USB switch.
- 3. DSD to non-DSD switch on dacs equipped with DSD separate engine. DSD must be selected by hand.
- 4. Other, but only if agreed with the user. Like SPDIF TOSLINK or MUTE

VOLTAGE: All DACs are shipped with the voltage of MAINS according to the country of destination. If you bought the DAC second hand and you are in different voltage zone - the DAC can be converted by a qualified technician. There is also a switch at the back allowing user to select mains voltage. We need to change transformer windings arrangement of the primaries.

It is not necessary, but advisable that the power cable used is a quality one, not simply a computer cable. It is also advisable to use some kind of AC filter – in many cases this brings nice results. Generally under-filtering is better than over-filtering.

Due to multitude of AC plugs around the world - we dont supply any AC cable at all.

TOGGLE SWITCHES

All toggle switches are safe to use even if by mistake. Dont be afraid to throw a toggle if for example you get no sound while you think you should.

We orient our toggles physically so their position and orientation of the lever corresponds to the placement of the respective input or output.

Example: if the toggle is marked USB-SPDIF - the lever towards USB means USB is selected, lever towards the RCA means RCA is selected. Same for Toslink, AESEBU, BNC etc.

The USB selector - selects USB against "all other digital inputs". Only then "all others" can be individually selected by the respective switches. USB selection to USB overrides all other inputs.

Introduction

Thank you for choosing Lampizator DAC. We created it with huge research effort to deliver not only world class musical performance, rivalling the most expensive DACS money can buy, but also to offer very long life of the product. Simply speaking – if you adhere to some basic precautions listed below – the product should last a lifetime and hopefully in this period – will never be outperformed by a competing product.

"Whose lifetime?" one might ask – well – let's not go into details – enough to say it should work flawlessly for the foreseeable future.

The DAC should be future-proof. Shall we ever launch a major upgrade to the digital part – you can get the upgrade at very reasonable cost. Shall you decide you need some added features – you can also get them at reasonable cost anytime in the future. Be it AES/EBU input, Toslink input, BNC input, XLR outputs, volume control, information status LEDs – any option you initially forgot.

We can't be 100% sure, but it is extremely unlikely that the market and the industry in the future will embark any technology of music storage faster than 192 kHz and with more resolution that 24 bits. We already hit the human ear limits, not to mention the real needs of mass consumers (MP3).

Data formats

The DAC is capable of automatic recognition of all sampling rates from 44 to 384 kHz and bit rates from 16 to 24. Since few if any transports offering SPDIF format of the 192 kHz exist in the consumer market, it is hard to guarantee the operation but on the professional ones which we tried – it worked. From our experience the transmitters of SPDIF are incapable of making good square wave over 48 kHz, so if you play a 192 kHz file, be aware that on one hand you "play" more detailed data, but at the same time your signal is waaay more distorted so at the end of the day for this reason alone it may not be worth it to chase the hi-rez rabbit.

If you use USB connection, all our DACs will play up to 384kHz and 32 bits. This theoretical limit does not imply that you need RECORDINGS of that resolution, which don't exist by the way, but that you can use up sampling to play regular files. We however listen to all recordings at the resolution settings they were recorded.

By PCM files we mean all known file formats like: MP3, MP4, Aiff, Flac, WMA, WAV, Ogg, and many more less known types. PCM abbreviation stands for pulse code modulation.

DSD

Direct Stream Digital, also known as DSD format - this format is not new as many people think, it is as old as digital but it wasn't used for consumer audio or home audio - before. It became very popular after 2010 and continues to make its way into our homes. It is VERY different than our well known PCM format as found in our CD files, MP3, FLAC or WAV - AIFF. It encodes the music in the data stream differently, looks different and sounds different. It is the format in which the SACD discs were recorded and a format in which the analog master tapes were backed up by record companies. It is currently the format in which the master recordings are made in record industry.

In ATLANTIC DAC - for the first time we use AUTOSENSING and automatic switch from DSD to PCM and back. Used doesn't need to do anything just enjoy.

Atlantic DAC will automatically recognise and switch all DSD speed rates from normal 64 SACD format to 2x (128x) and quad 256x format. 512 is supported only as a paid option shall you need one.

We believe that 256 is the maximum reasonable speed and going faster makes no sense.

Audio volume level

Tube technology allows us to set practically unlimited volume level at the output, up to 100 x higher than from a normal CD player. We have decided to adhere to one internally set standard: the test tone of 1 kHz at -20 dB produces an output of sine wave 300 mV AC under the amp load of 47K. Thats equivalent of circa 3 V pp. Shall this be inconvenient for some reason – it is adjustable in the range of 0-1800 mV by just one resistor change. The test tone is available from me via email in the form of WAV or AIFF or FLAC or MP3 file.

Generally - we prefer the sound of the DAC with high output levels, and most amps don't have any problem with that. A simple potentiometer or stepped attenuator takes care of that. Only solid state chip based preamps will saturate and distort thats why we need to know in advance about such solid state chip volume system being driven by the DAC. We will keep then the volume level at the "book" level of 2 V pp. Having said that - chip volume systems and preamps with opamps belong in home theatre (cheap one) and DEFINITELY not in high end.

LampizatOr DAC **should not be** used with opamp based preamp, no matter how good. Because the op-amp feedback loops will remove the whole joy of music as delivered by the tubed DAC.

The heat issue

Many people are concerned about the heat inside the player.

We want you to relax about it - that this is NOT an issue. The DAC operates well below half of its maximum allowed temperature. Tubes are DESIGNED to be hot, this is their very nature. Thats why they have internal heaters and when they are not at optimal operating temperature – they sound bad.

The other components are guaranteed up to 105C and we are expecting no more than 45 degrees Celsius in the air inside the DAC.

Our only advice is do not heat the box additionally by placing it - for example - on top of a hot class A amplifier. Give it some space around to allow free air flow and adequate cooling. Do not cover it with blankets or mats.

Optimal placement

Apart from the heat issue as described above, the DAC has no special placement requirements. Just remember to keep the S/PDIF cable not longer than 1,5 m (5 feet) and RCA chinch cables – not longer than that either. USB cables should not exceed 2m and MUST NOT have ferrite filters on them.

Since tubes are microphonic, they hate vibrations. Therefore it is forbidden to place the dac on top of the speakers or a sub. Choose least vibrating location, preferably one foot behind the plane of the speakers.

Power on-off cycle

The tube lifetime, almost like the life of a car engine in cold climate – is determined largely by the on-off cycle. The heat expansion coefficient of the glass is so much different than that of the metal, that the air-tight seal of the metal pins can leak oxygen inside the tube and eventually kill it. Even if it is just one molecule per day. So in other words it is better to keep the DAC always on, than to switch it on and off more than necessary.

The lampizator DAC with tube rectifier (Atlantic PLUS) has a slow start feature which brings the high voltage supply gradually up, at the rate of two- to five volts per second. The PSU reaches 250 V DC after 90 seconds. This helps to extend tube life. The DAC is also equipped with voltage down feature (bleeders) which reduce the power voltage upon switch-off at roughly the same rate.

On top of that – the tubes are operated always around 25% of full nominal power, which greatly increases their life expectancy. Combining all the factors together, the tube lifetime should be anywhere between 10 and 20 years, assuming the player is switched off only once per day, for the night.

Additionally all our DACs have special heater circuits that slow down the inrush current by the factor of 10 and protect the heaters (cathodes) from developing spots and blemishes that cause metal erosion and eventually death (of the tube). Our circuit goes way beyond the tube datasheet recommended protection. It extends the tube life at least double versus the datasheet specs.

Cabling and cable handling

Just to be sure that we know what we are doing:

- AC cable can be freely plugged and unplugged during operation. It is OK for the DAC but NOT OK for the amplifier and speakers. A loud thump may appear after switch off. Please turn your volume fully down before switching off the DAC.
- SPDIF cable should be plugged and unplugged when the transport is powered off. The DAC can be on. However doing it on "hot" when all is working – is not dangerous for the DAC as long as the AC power supply has the GND for all products (DAC, transport, amps).
- Signal cables can be plugged / unplugged with the amplifier volume turned fully down. XLR cables can be unplugged and plugged at any time because it is in their professional nature to do so.

Please use a decent AC cable. We suggest spending around 100-200 Euro for a good AC cable, not more but not much less. The free AC "computer grade" cables are not good enough for serious audio.

Please use a decent digital interconnect. In our DAC it is completely unimportant what is the wave characteristic impedance of the cable (the famous 75 Ohms). Just use the cable that sounds good to you. Analog as well as digital interconnects can be tried. Best results are obtained with silver cables. Let your ears decide, not specs of the cable.

Lampizators produces all types of cables for audio systems - you can order them from us with confidence of tremendous value for money. To beat our cables you need to spend 2000 Euro per one.

Tube rolling and replacement



W took an expensive and painful decision to sell the DAC with the best tubes we can find in consistent sustainable supply. Therefore we feel you should not be tempted to change them for any reason.

If you feel that you MUST try other tubes – we need to pre-authorize it in writing. Otherwise you loose the warranty, sorry.

It is possible to order the special version of DAC for tube rolling fans. It will have specially configured multiple sockets to enable the use of almost any existing tubes - from 6SN7GT to e182cc or EF80 or VT99.

Here are some practical tips for tube rolling:

- Tube compatibility- many people ask "is the tube X compatible with Y?" and the answer is of course - it depends. Tubes can have completely different bases but be compatible by parameters and can be swapped by means of an adaptor. A good example are ECC40, and 6SN7GT - different bases but very close parameters. Or ECC88 and 6DJ8. Or 6H8C and 6N1P.
- 2. Other scenario is when the tubes have same base (say noval) but they have different pinouts. So we CAN NOT inter-change the two tube types but we CAN use an adaptor. Same base type and same pinout DOES NOT MEAN that the tubes are interchangeable best example is cc81 and cc82 same base, same exact pinout but completely different parameters. Or octal 6SN7 and VT99 both octal, same parameters, different pinout.
- 3. Some tubes can have same base, same pinout and same parameters except the different heaters. Best example is ECC82 and 12BH7 the former uses half heating of the latter. They can be used with a switch or within limited timing or with extra care, depending on the heater arrangement in our DAC. Another example are completely different tubes that miraculously are perfectly interchangeable like E182CC with 5687.
- 4. DHT triodes used in our Level7 and Big 7 DAC are yet another can of worms. Most DHT tubes have the same base (four pin) and the same pinout (two fat legs are heaters and cathode, two slim legs are Grid and Anode. The problem is that these tubes have completely different heater demands. Our DAC7 is designed to accept ALL KNOWN dht triodes from this group: 101D, 45, 245, 345, 6A3, 2A3, 300B. People keep discovering more and more compatible triode types every month.

How is it possible to run so many triode types in one circuit ? DON'T THEY HAVE DIFFERENT HEATERS ?

Our genius circuit automatically detects the current demand and adjusts voltage accordingly. We added a switch which divides the tubes into two groups: high heaters and low heaters. High heaters are 2A3, 300B, 6A3 PX-25 and low heaters are 101D, 45, 245, 345, PX-4, 242.

ATLANTIC DAC in standard form uses Soviet 4P1L DHT pentode in triode mode. It has an LOKTAL BASE which is unique. It also uses unique pinout and unique heater voltage and current therefore ATLANTIC tubes can not be rolled at all. There is only one brand and one version.

We supply the tubes that are purchased new from reliable sources. They are tested and matched. They are the best sounding tubes we know and rolling them, even if possible, would make no sense.

PLEASE VISIT OUR AFFILIATED SHOP FOR BEST TUBES: WWW.BEST300B.COM

Rectifier Rolling



Rectifiers are generally less rolled but many customers report that huge leaps in synergy can be achieved when, after choosing the optimal music tubes, we also choose optimal rectifier.

How can we tell the rectifiers ?

At Lampizator we use generally two sub-groups of rectifier diodes: directly heated and indirectly heated.

Indirectly heated diodes are those which have separate heater coil mounted underneath the cathode. The heater current does not mix with the cathode current. This has several advantages (diodes are smaller, they live longer, they are much more vibration-resistant, and they can be connected in series with many tubes sharing one heater source. They have 5 active pins on an octal base. We use 6X5 (USA) or Soviet 6c5s (6u5C) type. They are very short bottles..

PINOUT: 2-7 is heater 6,3 V AC. Pin 8 is cathode. Pins 3 and 5 are two anodes.

Directly heated diodes are older in design, physically larger, and have 4 pins versus 5 and use 5V heaters versus 6,3.

PINOUT: 2-8 is heater 5,0 V AC. Pin 8 (or2) is also cathode. Pins 4 and 6 are two anodes. Other pins - even if existing - are not connected. To test - just use a meter and check resistance in ohms between the pins. IN A RECTIFIER THE ONLY TWO PINS WHICH SHOW ANY OHM READING AT ALL, ARE HEATER PINS. THE READING SHOULD BE IN SINGLE OHMS like 20hm.

Some people report back that the directly heated diodes sound better than their indirectly heated counterparts, but this hasn't been verified in any semi scientific way. Generally we expect the directly heated diodes to have up to 400% higher current capability as well as voltage max. It al depends on the DEMAND of our circuit. Some Lampizator tube stages

demand only 2 mA in total, some can demand 40mA and more. Atlantic DAC demand in total for 2 channels is 20 mA for SE or 40 mA for balanced version.

Rectifiers compatible: 274B, 5c3s, 5Y3, 5r4, 5U4G, GZ34, 5c4s, 5u4c Rectifiers can be changed safely **during playback**. Just grab them by the base.

To change music tubes you must switch off the amp. DAC can continue to work. The rectifier can be changed safely DURING LISTENING without even turning down the volume.

Aging problems

As already explained above, the DAC should age very very slowly.

The digital PCB should last a lifetime. The transformer, the copper caps, the cables, plugs, sockets – should last a lifetime. There are only 4 electrolyte caps which we selected from premium brands and they should last circa 25-30 years. Other than that we suggest to change tubes every 10 years.

So - short of a thunder-strike – we expect no failures or ageing problems before 20-30 years.

Fuse Change

The DAC is equipped with a non-repairable 20 mm glass fuse circuit breaker inside the IEC-AC socket at the back. There is also one spare fuse provided in the little drawer removable when changing the fuse. The fuses are 1,6A (or 2A for USA/Japan/Taiwan) they are slow blow, and overrated by the factor of 3. Therefore it is impossible for the fuse to blow without a specific reason - a failure inside the player. Consequently, if the fuse burns, it is a signal to send the dac for service and NOT change the fuse. Obviously the second fuse will burn as well.



WE ABSOLUTELY DO NOT ALLOW changing the fuses for any larger size than 1,6A or installing the "audiophile silver bolts" in place of the fuse. Fuses are there mainly to SAVE YOUR LIFE. And we mean that. You can experiment with audiophile grade fuses but not DEAD BOLTS please.

Volume control VC03

(This concerns DACs equipped with TAIV volume control modules with display and remote).

The volume control is an extremely nice module, that changes the way we use the DAC. The module consists of 5 elements:

1. Power supply with the DAC power management relay, allowing to switchON/OFF the whole DAC via the remote while keeping the volume module powered.

- 2. The display amber backlit 2 x 16 alpha LCD, which is our GUI.
- 3. The microprocessor board with memory, firmware and the chip that controls the relays
- 4. Relay volume board with resistor ladder. The microprocessor connects the resistors in such way that they form a resistive attenuation L-Pad with 63 steps of logarithmic attenuation. The overall impedance is held at almost constant 30k and the steps are calibrated in 1 db distances.
- 5. The virtual potentiometer with push action called the encoder.

The module is capable not only of volume adjustment but also of the input selectionboth analog inputs as well as digital.

Using the volume module: Press the volume knob down for 3 seconds and the display will show selection of 4 analog inputs . Turn the knob to select the desired input. Press for 3 s again to exit this menu.

The input selection is available from the remote in direct mode - just press digit 1 to 4 to choose input or use left - right cursor buttons.

PROGRAMMING THE MODULE

Press the volume knob for 10 seconds continuously and the display will enter the programming mode. Turn the knob clockwise to go to next menu. Press the knob for 2 s to enter the selected sub-menu. To exit the sub menu and go back to menu list - press the knob for 2 s. To exit programming mode - turn the knob right till you choose EXIT SETUP and press knob for 2 s.

- 1. Volume step speed: it is default set at 3, the higher the number the slower is the reaction of volume level to turning the knob. For example, choosing 6 means that it takes 3 full turns 360 degrees to adjust the volume full scale. We like it at 6.
- 2. Number of inputs: choose a limitation of analog inputs to avoid having to deal with non-existing inputs. The normal DACS have a limitation set to one.
- Backlight display choose a percentage of DIMMING from full light intensity of display that dims AFTER the period of inactivity. Setting 40 % means, that the display will be lit 100% during any operation with knob or remote, but when we listen - the display will dim to 40 % of the full level. We like it on 20 because we like listening in the dark room.
- 4. IR Learning you can program any remote control you want to perform the desired actions. For example if you use a CD transport remote, you can choose two buttons on it that aren't used for CD and program them to be Vol-Up and Vol-Down, so you use just one remote. After entering this sub-menu the display will ask you to press the remote button and you acknowledge the signal code by pressing the knob for 2 s and proceeding to next function. The display will guide you. At the end choose exit.
- 5. OUTPUTS: the module has 3 freely programmable latching or non latching outputs activated by the remote control. They can be wired to perform a specific function inside the DAC (say reset, change frequency, activate de-emphase or something like that.
- 6. Logo change: you can change the welcome logo to your own.
- 7. Alphanumeric descriptors: you can add alpha descriptors to the 4 inputs. the first input by default is DAC. Add Phono, Tuner, TV to the other inputs of analog stereo signals. (The DAC must be equipped with the RCA inputs to use this function).
- 8. After reaching the end of menu list the display will show EXIT SETUP. The options we programmed will be written to a non volatile memory and stored forever. There is no limit to how many times we can repeat this operation.

MUTE function: this is useful to use instead of turning the volume all the way down. Available ONLY via remote.

POWER OFF - the DAC will be switched off fully but the remote module will be always alive to enable you to power it ON again.

*** Do not be upset about the "C-2014" text - it means the date the firmware was written for this module and not the year of manufacturing of the DAC.

0dB operation: at full volume - 0dB the DAC operates as if there was no volume module. This position is recommended for systems with own volume control: preamp or integrated amp. The resistor ladder is completely by-passed.

DANZUP (recognized by the welcome line text LAMPIZATOR.EU) remote control

Alternatively to TAIV VC03 control we use DANZUP remote system. The volume adjustment function is THE SAME and the sound quality is the same as VC03.

From the user perspective the functional differences are:

- in DANZUP system the volume dial knob does not have the "push" function. In VC03 the volume dial knob has a push function, and works similarly to the BMW iDrive controller. To enter the hidden functions of DANZUP system, you must press the service button which we locate on the floor plate of the dac. Usually for convenience the secret button is located near the front panel - around the center point, under the ring button. So it is easy to access by index finger.
- Press the button once to change analog input channels (PCM-DSD-Preamp-Line)
- Press button more than once to enter service functions like: enroll new remote control unit, choose dimming backlight function of the display, choose alphanumeric descriptors of the names of inputs, and we keep adding extra functionality.

COOPERATION WITH THE PREAMP

The DAC with volume control should sound audibly cleaner and more direct without any preamp between the DAC and the amp. The preamp, however good, will veil a lot of the DAC's natural clarity, speed and directness. If you feel you need the preamp nevertheless, use DAC at the full volume or order your DAC without volume module.

The load presented by the preamp or amp or simply the next analog component that the DAC sees, should be as high as possible. It is measured in kilo-Ohms and 100Kilo Ohms is a perfect ballpark value. More is VERY rarely seen. 47 K is next common value, and it is great too. 20 K is kind of on a low side, but we can handle that. Lower than 20k is bad news. We must configure the DAC with additional cathode follower buffer stage.

The DAC will not be damaged in any way, but at around 10K of load the dynamics of the dac will start to fade away.

Having said that - every properly designed amp or preamp keeps the load value above 40k. And if it doesn't - we simply don't choose such amp because it was not designed with audiophiles in mind.

DIGITAL INPUTS

There are three data types that our DAC can read internally: biphase, i2s and USB. The bi-phase can come in many forms, but the most common are:

S/PDIF (sony/Philips data inter face) by means of single ended square wave of amplitude around 0,5 V pp

AES/EBU - the same as S/PDIF but the signal is a mirrored (balanced) pair of square waves around 2,5 V pp (max. 5 V pp)

TTL - just as S/PDIF but 5 V pp

TOSLINK - a fiber optic transmission of S/PDIF producing at the DAC the 5 V TTL electrical signal.

RS422 - it is practically the same as AES/EBU

The i2S is the same as biphase but separated into 4 signals - each carrying only one type of information. Biphase encodes 4 groups of informations in one signal stream. Specifically they are: System Clock, Bit Clock, Left/Right Clock and Data. We can install these four in any type of connector, because there is no standard. Most customers use RJ45 LAN socket or simply four RCA sockets just like in TV RGB.

I2S Pinouts

The JKI2S uses a RJ45 connector to output I2S signals according to the following pin outs:

1	SLCK
2	SLCK GND
3	SDATA
4	SDATA GND
5	L/RCLK
6	L/RCLK GND
7	MCLK
8	MCLK GND





Figure 1: End view of RJ45 Plug

Figure 2: Looking into an RJ45 Jack

The TOSLINK connection

Is toslink bad or not ? That is the question. Like everything in life - it can be bad or it can be good.

By using own experiments and oscilloscope observations we concluded, that Toslink is not bad and not inferior to RCA SPDIF if implemented properly. Toslink is EXTREMELY demanding about the power supply quality. That's why we build for toslink separate dedicated power supply and with this supply the response is instantaneous and there is no deformation of square wave. Usually Toslink ports are installed in cheap low end gear and the power supply to Toslink is completely neglected. Not in LampizatOr DAC. If you have Toslink in your DAC you can be sure it will sound good and not degrade the sound. Of course providing that the transmitter part of the link is at least semi decent.

NOTE: All Apple products which have headphone output (iMac, MacBook, Power MAC, MAcMini, iPhone, iPad, iPod) - have a secret toslink transmitter hidden inside that port. Just buy the special cable - Toslink Minijack and when placed in the headphone output of an Apple product - will emit light with SPDIF in it. That is a very good way of using MAC computers as transports.

USB playback

USB data requires installation of additional converter module to convert the "packet" data into a steady i2S stream. Our asynchronous converter has internal RAM and two own clocks and own power supply and own power transformer secondary winding.

The USB module requires a driver for Windows to recognize it. MAC OS and LINUX work without any need for extra drivers.

We use three vendors of USB modules:



For ATLANTIC we use "Amanero" USB module: the driver is at www.amanero.com/drivers

Do not install windows driver with the DAC USB connected to PC.

Our USB converter is capable of working with 32 bit files with 384kHz signal frequency.

Only USB2 rated cables will work. The USB standard printer cable will not work.

USB cables with ferrite filters (the "thingie" on the cable) will not work.

MAC OS operation of USB output:

MAC OS dos not require any driver installation. Somehow miraculously the MAC computer knows how to handle all USB devices. Microsoft, even 15 years later, still cant figure out how to do it. They are probably still scratching their heads.

After plugging the DAC by the USB cable and turning it on, within 3 seconds the device should show up on the MAC.

Note: the device will NOT be described as Lampizator DAC but as Amanero Combo module.

To verify what is going on, please go to the "apple sign" in top left corner of the screen and choose PREFERENCES and then the loudspeaker icon - SOUND.



Above: on that list the Amanero should appear under INTERNAL SPEAKERS.

Next thing to check is MIDI SETTINGS of the MAC computer. We go to the top right corner of the screen and press SPOTLIGHT (Loupe):

We type in the search line MIDI SETUP and -> enter.



In the MIDI setup we can choose frequencies of sampling we use for the Amanero output. We don't think that the higher the better but your own test should confirm that.

(•			Audio Devices		
	٢	Built-in Microphone 2 in/ 0 out	Ŷ	Built-in Ou	put		
		Built-in Input 2 in/ 0 out		Clock source	e: Default		
	K	Built-in Output 0 in/ 2 out	19		Input Output		
				Source:	Internal Speakers		
				Format:	44100,0 Hz 💙 2ch-24bit Integer		
					44100.0 Hz		
			(Ch Volume	48000,0 Hz	Value	dE
			(Ch Volume Master	48000,0 Hz 88200,0 Hz	Value	dE
			1	Ch Volume Master	48000,0 Hz 88200,0 Hz 96000,0 Hz	Value 0.626	dE -12

LampizatOr- ATLANTIC DAC Manual

LISTENING TO THE MUSIC

some practical tips

Please use good shelf for the DAC. Do not place it on speakers, subs, or even on transports or amps. Again - tubes hate vibrations.

If you try the special devices for placement, we feel that: granite or marble is bad (ringing). Cones are just plain ridiculous and stupid. Cones are for uneducated people. Ceramic ball bearing feet are great. Good wood is great if thick. Others - please try.

The way stereo sound is created inside the DAC can - under optimal condition - recreate the musical experience as it sounded live. It means that two speakers can cause us listeners to hear sounds everywhere around us, above, below, far in front, almost close to our face, and also behind us. This type of imaging is our goal. The sound must be able to get detached from the speakers (so called disappearing act) and the more our DAC helps doing it - the higher we value it (and price accordingly). We voice our DACs to be as 3-D as possible with the beginning of that 3D as close to listener as possible.

From our experience speakers should be positioned following the basic rules of LampizatOr Nirvana Room:

- 1. Speakers and listener's head form unilateral triangle (3 x 60 degrees) with the distance between speakers being exactly equal to distance head-speaker.
- 2. Head must be in exactly middle of the speaker base and the speaker base must be exactly symmetrical versus side walls. We place speakers and measure the distance from side walls with 1 cm accuracy.
- 3. The distance of the speakers to the side walls and speakers to rear wall should not be equal. We recommend 1,4 times smaller or 1,4 times larger distance- but not equal. We measure that counting from the magnet of the bass driver.
- 4. Distance from rear wall of speaker and rear wall of the room should be no less than 0,5 m or 2 feet.
- 5. Ideally, the tweeter should be at the height of the ear or up to 10 cm higher, but nOT LOWER. Speakers with tweeters lower than 90 cm sound terribly wrong. In such event do everything you can to elevate the speaker by means of stands, bases or just cement block or at least lower the listening seat as much as possible.
- 6. The chair or sofa should not have the back support higher than the person's shoulders in other words should not be just behind the ears
- 7. Feet are the second ears of our body. They receive a lot of vibration stimulation and the brain combines this with the hearing. So we advise to have a piece of floor without any carpet directly where our feet are. Listening with feet (preferably bare)

on the hard floor greatly enhances our perception of music. It is advisable to have rug or carper between listener and speakers but not under the feet.

- 8. It is advisable to put something soft directly on the wall behind the speakers
- 9. The so called toe-in the degree by which the speakers face the listener and not alongside the walls straight is very critical. The rule of thumb is to toe in <u>half way</u> between standing straight and aiming at the listeners ear. Or slightly more straight, but not more towards the head. Over- toe-in kills the soundstage.

BURN IN PERIOD

The DAC comes straight from our factory after around 24 Hours of testing so it is not exactly "new" but it is not burned-in enough. Our customers report back, that after 3 days of constant powering (playing or not) the DAC opens up significantly. Further improvements are observed after up to 7 days when things stabilise.

Additional one day burn in is needed after every time the DAC: travels somewhere (vibrations), or is disconnected for over a month or is subject to cold temperature - like in the car trunk, when left overnight.

When the DAC is fully burned in, the sound quality is stable, and we only need to warm it after powering every day.

The DAC starts to play after 10 seconds.

The tubes reach full technical parameters and stabilise after 40 s. but that does not mean that the DAC sounds it's best yet.

The whole system reaches operating temperature plateau after circa 20 minutes and it is ready for serious listening.

ENJOY YOUR MUSIC LIKE NEVER BEFORE !

Audirvana Screenshots of working MAC OS configuration:





		Audirv	ana Prefer	ences			1
			())	AU	70		
	General Audio System A	udio Filters A	udio Volume	AudioUnits	SysOptin	nizer iTunes	
	Preferred Audio Devi	се					
	Combo384 Ama	anero		Chang	e		
	Active Audie Device						
	Built-in Output						
	44.1 48 8	8.2 96	176.4 19	2	DSD	64 DSD128	5
	Stereo						
	Na	tive DSD Capa	bility DS	D over PCM	standard 1	.0 🗘	1
							5
							1
	Low level playback o	ptions					
	Exclusive ac	cess mode	🗌 Inte	oer mode	(if avail o	n device)	
	Direct Mode			ger mode	(ii avaii. o	in device)	
	Maximum memory al	located for t	racks pre-	oad	806 N		
					030 1		
	22	mn @44.1kH	z	10mn @9	6kHz		
	Carlenidare devices a		- 040				-
	For bridge devices of Max sample rate lin	mit No Limi	a DAC	l rate swite	hina late	ncv None 🙃	
	max sumple rate in			i luco owite	aning iute		
	Limit max bitde	pth to 24bit i	nstead of	32bit	-		
	Limit max bitde	pth to 24bit i	nstead of	32bit	-		
	Limit max bitde	pth to 24bit i Audir	nstead of	32bit eference	s		
	Limit max bitde	Audir	nstead of	32bit eference	s AU		
	C Limit max bitde	Audir	vana Pr	32bit eference	s \U		•
Cenera Cenera	Limit max bitde	Audir Audir Audir	vana Pr	32bit eference) /	is AU lioUnits	SysOptimizer	iTunes
))))))))))))))	Limit max bitde	Audir Audir dio Filters	vana Pr	32bit eference Jume Auc	ioUnits	SysOptimizer	(I) iTunes
àenera Sys(Limit max bitde	Audir Audir dio Filters	vana Pr vana Pr ()) Audio Vo	32bit eference lume Auc Playback	ioUnits	SysOptimizer	iTunes
Genera SysC esse	Limit max bitde	Audir Audir dio Filters es OSX for can caus	nstead of wana Pr ()) Audio Vo r Audio I e intefe	32bit eference lume Auc Playback rences d	ioUnits to by dea	SysOptimizer activating no ital to sound	iTunes
Benera Sys(esse	Limit max bitde	Audir Audir dio Filters as OSX for can caus	nstead of vana Pr ()) Audio Vo r Audio I e intefe	32bit eference lume Aud Playback rences d	ioUnits	SysOptimizer activating no ital to sound	iTunes
Aenera Sys(esse	Limit max bitde	Audir Audir dio Filters es OSX for can caus	nstead of vana Pr wana	32bit eference Jume Aud Playback rences d	ioUnits	SysOptimizer activating no ital to sound	iTunes
àenera Sys(Limit max bitder	Audir Audir Audir dio Filters es OSX for t can caus em for Aud	nstead of vana Pr wana Pr www. Audio Vo r Audio Vo r Audio Vo r Audio I dio Play	32bit eference lume Auc Playback rences d back	ioUnits	SysOptimizer activating no atal to sound	iTunes
aenera Sys(Limit max bitder Limit max bitder Audio System Au Optimizer optimize Optimizer sthat Optimize System Audirvana Pl Disable S	Audir Audir Audir dio Filters es OSX for t can caus em for Aud lus priority	Audio Vo r Audio I dio Play	32bit eference lume Auc Playback rences d back hack	ioUnits by dea etrimen	SysOptimizer activating no ital to sound	iTunes
Aenera Sys(esse	 ✓ Limit max bitdep ✓ Limit max bitdep ✓ Audio System Autor ✓ Optimizer optimize ✓ Optimize System ✓ Audirvana Pl ✓ Disable S ✓ Disable T 	Audir Audir	nstead of rvana Pr ())) Audio Vo r Audio I e intefer dio Play r Very ine	32bit eference lume Auc Playback rences d back	ioUnits by dea etrimer	SysOptimizer activating no	iTunes
àenera Sys(C Limit max bitde	Audir Audir	nstead of vana Pr wana	32bit eference lume Auc Playback rences d back High	ioUnits by dea etrimer	SysOptimizer activating no atal to sound	iTunes
aenera Sys(Limit max bitdep Limit max bitdep Audio System Au Optimizer optimizes Services that Optimize System Audirvana Pl Disable S Disable T Disable d 	Audir Audir	Audio Vo r Audio Vo r Audio I dio Play r Very ine f iDevice	eference lume Auc Playback rences d back High	ioUnits by dea etrimen	SysOptimizer activating no ital to sound	iTunes
Sys(esse	 Limit max bitdep Limit max bitdep Audio System Au Optimizer optimize ential services that Optimize System Audirvana Pl Disable S Disable T Disable d 	Audir Audir	nstead of vana Pr ())) Audio Vo r Audio I e intefel dio Play v Very ine f iDevice	32bit eference lume Auc Playback rences d back High	s lioUnits by dea etrimen	SysOptimizer activating no ital to sound	iTunes

General Audio System Audio	Audirvana Preferer	AU AudioUnits Sy	SOptimizer iTunes
Sample Rate Conversion			
Converter:	iZotope 64-bit SR	C 🗘	
Quality _F	astest	Best	
Advanced parar	neters		
Steepness:		- 97	dB
Filter max length:		500,000	Samples
Cutoff freq.:		- 1,00	X Nyquist
Anti-aliasing:		- 175.0	0
Pre-ringing:	Min. Phase Lines) 1.00	2
Forced Upsampling:	O None		
	O Power of 2 over	sampling onl	y (2x, 4x,)
	Maximum samp	le rate upsan	npling
	Oversampling 2	x only	
	Custom	Edit cust	om settings
This could result in pauses in Note that changes will be effe Audio Signal Polarity Invert globally	playback. active only upon next pl th INVERTPOLARITY	ayback start. ' comment	
• • •	Audirvana Pref	erences	
	7. (1)	AU	
- O		-1	<u> </u>
General Audio System Audio	Filters Audio Volume	AudioUnits S	ysOptimizer Tunes
AudioUnits	ects		
No Effect		•	Configure
No Effect		•	Configure
No Effect		•	Configure
No Effect		0	Configure
Realtime AudioUnit	s control and setup		

z e



JRiver DSD setting screenshots

Audio	Zone to configure: Odtwarzacz					
🚝 Wypalanie	▼ Audio Device					
CD, DVD i BD	Combo384 ASIO 1.03 [ASIO]					
S Kodowanie	Device settings					
C Lokalizacje plików	▼ Ustawienia					
	DSP i format wyjścia					
	 Bitstreaming: Tak (Dolby Digital (AC3), Dolby Digital Plus (E-AC3), Dolby Tru 					
Ogólne .	Brak (zalecane) skund (zalecane)					
📱 Urządzenie przeno	S/PDIF amianiu w celu synchronizacji ze sprzętemi Brak					
Obrazy	HDMI lamiast z dysku (nie zwazane ze strefamu)					
Biblioteka i folderv	atne przy Howi audio)					
Dibiloteka i roluciy	▼ Zmiana utworu ht					
Sieć multimedialna	Przechodzenie między utworami: Przejście (agresywne) - 4s					
Podkasty	✓ Nie odtwarzaj ciszy (początek i koniec)					
Pilot	Odtwarzaj bez przerw kolejne utwory z albumu					
Pilot	 Zatrzymywanie, przeszukiwanie i przeskakiwanie 					
Usługi	Przeszukiwanie: Gładko (normalnie)					
Uruchamianie	Stop: Zanikanie (szybko)					

anie	* Audio Device	
D i BD	Combo384 ASIO 1.03 [ASIO]	
ranie	Device settings	
zacje plików	Formaty bitstreamingu	x
lików	Dolby Digital (AC3)	eHD, DTS,
е.	Dolby Digital Plus (E-AC3)	
zenie przeno	Dolby TrueHD	
y	DTS	
teka i foldery	DTS-HD	
nultimedialna	☑ DSD	
isty	DSD poprzez PCM (DoP)	
	Format DoP: DoP 1.0 (0xFA / 0x05)	
amianie	OK Anu	4
izja	Zachowanie przeskakiwania: Do przodu 30 sekund, do tyłu 10 sekun	4

	Come Away With M 1:01 / 3:18 - 564	e (Come Away)
	Opcje	and a second second
Audio	Zone to configure: Odtwarzącz	
Wypalanie	* Audio Device	-
CD, DVD i BD	Combo384 ASIO 1.03 [ASIO]	
Kodowanie	Default Audio Device [Direct Sound]	
Lokalizacje plików	▼ Ust ✓ Combo384 ASIO 1.03 [ASIO]	
Typy plików	(Intel SST Audio Device (WDM)) [WASAPI]	
Ogólne	Więcej	S-HD, DSD)
Urządzenie przeno	Odtwarzaj ciszę przy uruchamianiu w celu synchronizacji za zastatem Bush	
Obrazy	Odtwarzaj pliki z pamięci zamiast z dysku (nie związane ze strefami)	
Biblioteka i foldery	Nie wyłączaj ekranu (przydatne przy HDMl audio)	
Sieć multimedialna	▼ Zmiana utworu	
Podkasty	 Przechodzenie między utworami: Przejście (agresywne) - 4s Nie odtwarzaj cisty (pocsatek i konice) 	
Pilot	Odtwarzaj bez przerw kolejne utwory z albumu	
Uchuri	 Zatrzymywanie, przeszukiwanie i przeskakiwanie 	
	Przeszukiwanie: Gładko (normalnie)	
Oruchamianie	Stop: Zanikanie (szybko)	
Telewizja	Pauza: Zanikanie (szybko)	
Tryb teatru	i Zachowanie przeskakiwania: Do przodu 30 sekund, do tyłu 10 sekund	
Drzewo i widok	* Glosnosc	

Block Diagrams

Block Diagram - DAC with Remote Control



Block Diagram - DAC without Remote Control



SOME Q & A

1. Why ATLANTIC?

Atlantic name is to commemorate Lukasz Fikus sailing voyage across that ocean in May 2016 where he took the decision to build this very special DAC, focusing on it during the endless sailing shifts of duty.

2. Why DHP?

The decision of using directly heated pentodes comes from three main decisive factors the fact that other more popular tubes are getting rapidly harder to get and more expensive, second factor being that the whole DIY community reports that this is the best sounding tube they can find and third - that directly heated IS THE WAY TO GO for highest level of DACs as we demonstrated in our flagship Golden Gate.

3. Why R2R conversion?

From 2014 we observe that the top 5 DAC companies in the world use R2R discrete ladders as their top solutions. These solutions go up to 100 000 Dollars for a DAC or even more. Therefore we co- developed our own R2R solution and we offered it in our Golden Gate DAC. Atlantic project is about bringing this superb and superior converter type DOWN IN PRICE POINT to be accessible by the majority of audiophiles.

4. Why Copper capacitors?

Since there are only 3 components in total in our signal path - it is important to use these 3 parts from the highest quality group. the output capacitor is one of the three so we wanted to use the best available at any price. So here it is - our Lampizator house branded copper cap which matches the 4 known copper brands in quality of sound.

5. Why do you claim this to be your best DAC ever?

Well, the above explanations sum up to the statement - that the Atlantic is the only known DAC that combines R2R discrete ladder conversion, Directly Heated triode tube output, copper capacitors (with real Cu foil versus the metal vaporised plastic) and last but not least 10 years of Lampizator's expertise in DAC technology. Zero local nor global feedback, zero opamps or transistors in signal circuits. Add to it the DSD capability and excellent test / purchase / warranty / upgrade policy and - you get as a package - **the best DAC in the world.**

I PLUGGED EVERYTHING BUT I GET NO SOUND

Quick check list:

Is the voltage at the back switch selected to your country?

Is AC power switch at the back thrown to ON and red lamp illuminated?

Is ring on the front illuminated ?

Are tubes warm to touch after min. 1 minute ? Glowing in the darkness ?

Is the ring button pressed in (meaning USB input engaged in non-Volume Control DACs)

Is the ring button OUT - meaning SPDIF input engaged - in non-VOLUME CONTROL DACs

In DACs with more than one SPDIF input (also Toslink, BNC, AESEBU) is the rear panel's toggle switch pointing towards the right input?

Are analog RCA cables leading to the amp connected to OUTPUT sockets, and NOT the preamp input sockets (in Vol-CTRL DACs?)

Is your amplifier: powered, connected, input selected correctly, un-muted, with speakers connected ?

If you use a computer with USB connection - is the driver recognised ? Is Windows driver installed (Amanero Combo384?)

Is the computer's output device properly defined to be AMANERO COMBO384 and not speakers, SPDIF, Toslink or Intel?

Is the computer's digital volume control set to maximum ?

Is the USB cable not of USB1.0 type, not longer than 2 m and not with ferrite rings on it?

In Vol-CTRL DAC is the mute dis-engaged (see the screen) and is volume NOT on -63 DB but at least on -20dB? Is the input selected according too display - on proper input ? Cycle CHANNELS pr PGM UP-DOWN to go through the input list.